



# Acer Iconia B1-711 Camera Replacement

Acer Iconia B1-711 Camera Replacement

Written By: ZFix



## INTRODUCTION

This guide will show you how to open the tablet and remove / replace the camera.

[Please SUBSCRIBE to my channel ツ](#)

[video: <http://youtu.be/8-djJ2aXa60>]

---



### TOOLS:

- [Spudger](#) (1)
  - [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Back Cover



- Switch-off the tablet.
  - Remove any SIM and/or Memory Card.
  - Start opening near to the Volume Up/Down buttons. It's more well to use a plastic opening tool to avoid damaging the cover.
- ⚠ When lifting the cover, be careful not to tear the Loudspeaker cable at the bottom right side.
- Disconnect the Loudspeaker cable from the Logic board.


## Step 2



⚠ Before doing anything, disconnect the battery.

★ [Please SUBSCRIBE to my channel ツ](#)


## Step 3 — Camera

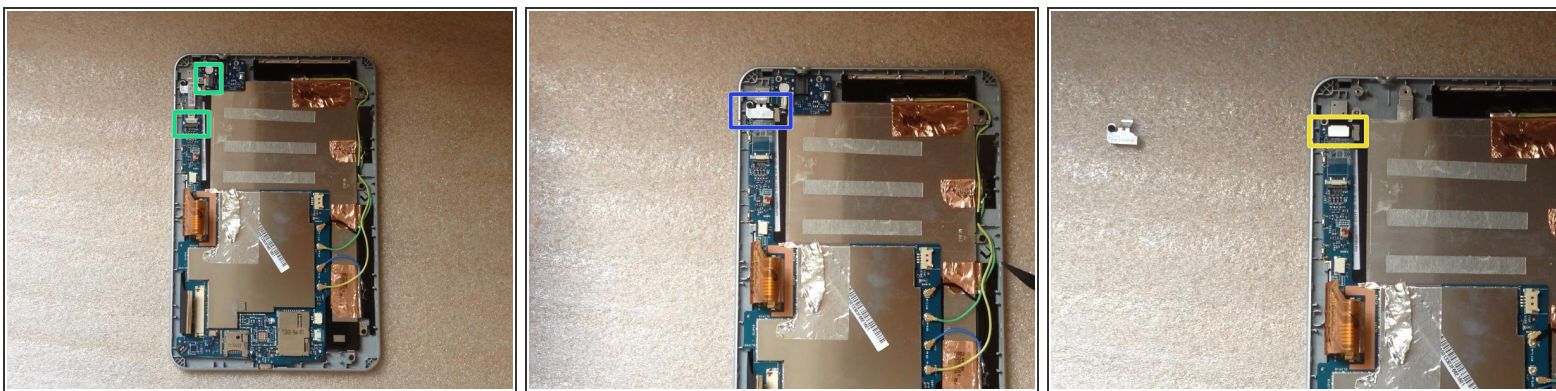

- Remove the Audio jack flex cable.
- Remove the metal plate which is placed on the camera connector.
- Disconnect the camera flex cable.



## Step 4

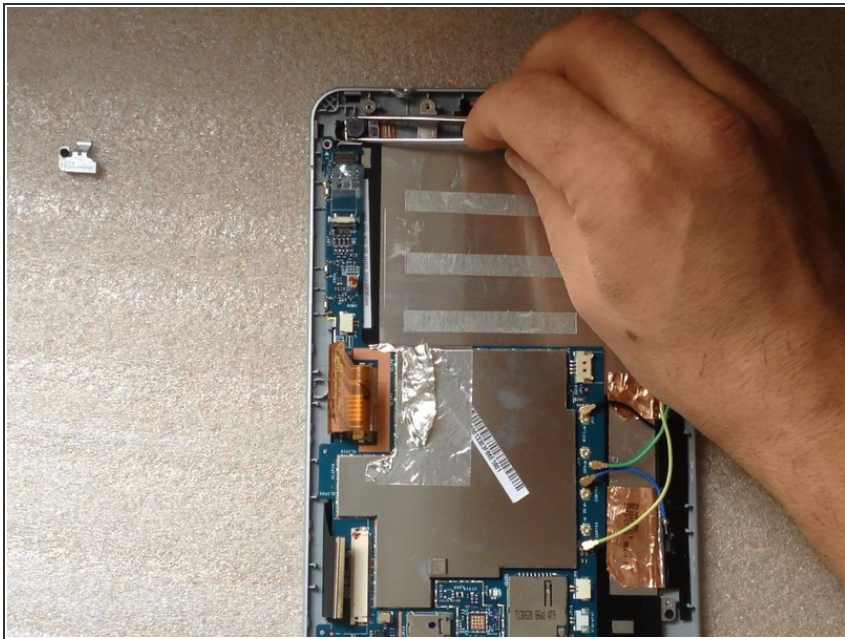

- Remove the camera.
- [Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 11:43:07 AM.